


Wiring & Installation Diagram for ST-26392 LOAD-PAK

Instruction Bulletin No. 215133

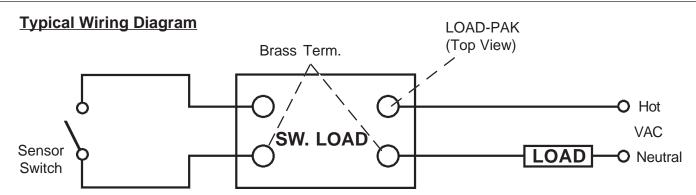

Wires connecting external sensor switches to LOAD-PAKS should not be placed in raceways or conduits containing high voltage lines. Voltages induced from these lines may trigger the low-power, solid-state triac; causing it to turn "on" momentarily.

Surge Current Ratings (Non-Repetitive)

Part Number	LOAD-PAK Rating	Overload Time		
		.010 Sec.	1.0 Sec.	10 Sec.
		Overload, Amps		
26392	10 Amps, AC	50	30	15

Note: Mechanical holding or latching contacts (contactors) may cause some loads to latch under transient conditions.

Specifications

Operating & Load Voltage Range	24 to 260 VAC	
Voltage Loss	2 VAC	
Sensor Current, Max.	20 mA	
Allowable Resistance in Sensor Circuit to Turn "ON" (Max.)	4 kΩ@ Nom. Volt.	
Leakage Current Thru Load Term.	12 mA @ 240 VAC	
Switching Mode	SPST, N.O.	
Operating Temperature	0°F to 120°F (-17.8°C to 48.9°C)	



Gems Sensors Inc. One Cowles Road Plainville, CT 06062.1198

tel 860 747 3000 fax 860 747 4244